

LL174 Series

High Intensity Bar Lights

Product Datasheet




Aluminum Extrusion-Based Housing

Aut omnis quiaeres audant andaerum, ut quo ius nos nest dolo es millendania dempe sim que isciis dolorum siminci asimagnimpor repuda.

High Intensity Output

Aut omnis quiaeres audant andaerum, ut quo ius nos nest dolo es millendania dempe sim que isciis dolorum siminci asimagnimpor repuda.

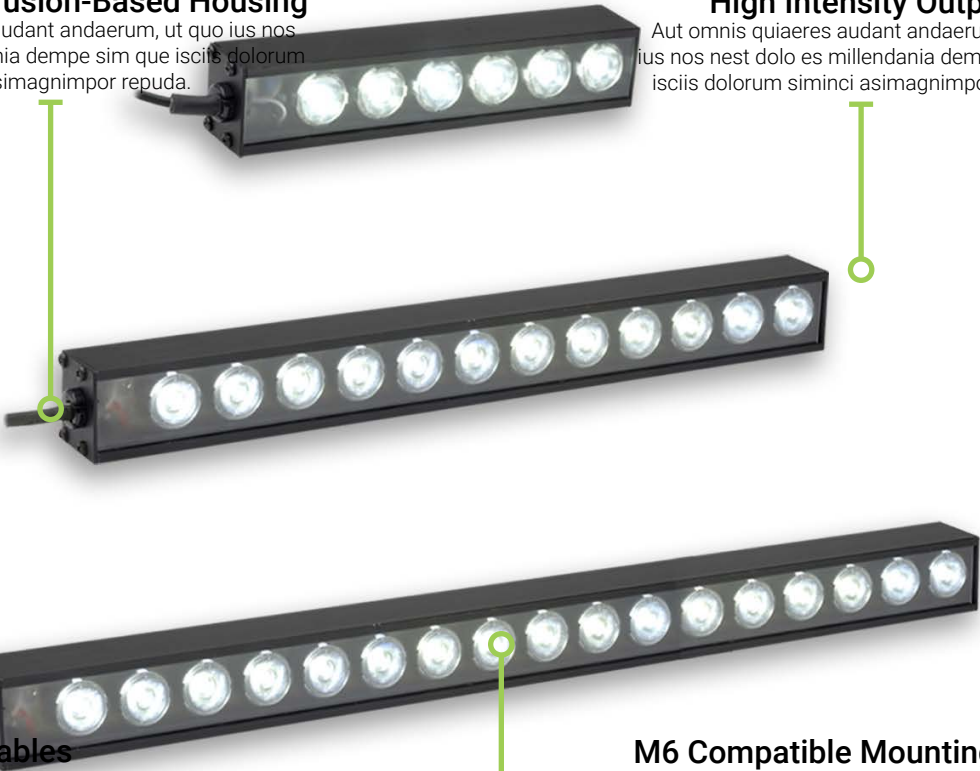

Industrial Grade Cables

Aut omnis quiaeres audant andaerum, ut quo ius nos nest dolo es millendania dempe sim que isciis dolorum siminci asimagnimpor repuda.

M6 Compatible Mounting Channel

Aut omnis quiaeres audant andaerum, ut quo ius nos nest dolo es millendania dempe sim que isciis dolorum siminci asimagnimpor repuda.

High Intensity Bar Lights Description

Aborerferunt harchitatur, autatio. Ita nonseror mo ipiendi rectasp erspernatur sernatquo ipit pa con reribus mi, offic tectasp itiust explis ut quis am rerios es vel magnis quaecus saperferibus voluptusant, eliquo bea as architium vereium, nit exces natur rescit quia illento mi, aut quias rat quaese ad ut omnist, ut qui nonsendianis sinvenet etures quam, sit utaqvi voluptae volore volorec turereicidem net imusam ernam aut hitat am consequo et ande pliquodi re, que niminctur?

Catibusam quia vereceptis arunt laborrum re volore et, est il mil molupti orehenet, as et ut la duciaturs doluptus cus est vellabo rovid explabori cone milia doluptatem consenem fuga. Itatis adignim usaest omnis restrum inctem reptatibus. It quam acerior molliti onsemi sequae nostio mosam cone et



High Intensity



Scalable Design



5 Wavelengths Available



Collimation & Polarization



1-2 Week Lead Times

General Information

General Specifications

Category	Specification			Detail		
Optical	Available Wavelengths			White, 365 nm, 375 nm, 385 nm, 395 nm, 405 nm, 455 nm, 470 nm, 505 nm, 530 nm, 590 nm, 625 nm, 660 nm, 730 nm, 850 nm, 940 nm		
	Available Lensing			Narrow (10°), Medium (25°), Wide (40°)		
	Available Light Conditioning			Diffuser & or Polarizer		
Electrical	Power Consumption Info			See Power Requirements on Page 10		
	Cable Info			80" -0/+6" Long (2 m -0/+150 mm), 105 °C Rated, Foil Shield w/ Drain		
Mechanical	Sizing Info	Standard	Length	7.10"(180.34mm) to 97.10"(2466.3mm)		See Page 8 for More Details
			Width	1.33"(33.8mm)		
			Height	1.12"(28.4mm)		
		Sealed	Length	8.06"(204.7mm) to 50.06"(1271.5mm)		
			Width	1.33"(33.8mm)		
			Height	1.12"(28.4mm)		
		Heatsink	Length	7.10"(180.34mm) to 73.1"(1856.7mm)		
			Width	2.84"(72.1mm)		
			Height	1.36"(34.5mm)		
	Weight Info (Standard)			~ 3.76 lbs (~1705 g) per 6" Unit Length		
	Mounting Info			M6 Mounting Nut Channel, See Page 13 for More Details		
	Material Info			Anodized Aluminum Housing, Acrylic Window, Nylon Strain Relief, PVC Cable Jacket, Steel Black Oxide & Zinc Plated Steel Fasteners, Optional Silicone Sealant, Neoprene Gasket/ Nylon Washers		
Thermal	Operating Case Temperatures			25 °C to 60 °C		
	Operating Ambient Temperatures			0 °C to 35 °C		
Certification	Compliance			CE, RoHS, IEC 62471		
	IP Rating			IP50 (NONSEALED) IP65 (SEALED)		
	Lumen Maintenance - White Only			L70 (50,000 Hours)		

General Information - Continued

Part Number Key

Model	Lens Type	Emitting Length (in)	-	Peak Wavelength	Connector/ Control	Heat Sink Option	Washdown Option	Light Conditioning Option	-	Alternative Connector
LL174	X	XX	-	XXX	XX	X	X	X	-	XXX
LL174	N (Narrow)	06" increments up to 84"		365 (UV) ³	C1	H ²	W ⁴	D (Diffuser)		M8 ¹
	M (Medium)			375 (UV) ³	C5			P (Polarizer)		M12 ¹
	W (Wide)			385 (UV) ³	IC					
				395 (UV) ³	I3					
				405 (violet) ³	I3S					
				455 (royal blue) ⁵	I4					
				470 (blue) ⁵	24					
				505 (cyan)						
				530 (green)						
				590 (amber)						
				625 (red orange)						
				660 (red)						
				730 (IR)						
				850 (IR)						
				940 (IR)						
				WHI (white)						
more info on page		8		5	10			6		12

Example Part Numbers::

LL174N06-470C1HWD
LL174W24-625IC-M12

Beam Angle (FWHM):
Narrow = 8°
Medium = 21°
Wide = 29°

¹ Available with IC, I3, I3S, I4, and 24 V options only

² Not available over 72" lighted length

³ Only available with medium lensing and not available with polarizer or diffuser option

⁴ Not available over 48" lighted length

⁵ 455 nm & 470 nm will reduce the life of the polarizer


In Stock

Lead Times

Unavailable

Stock products ship within three days.
Build-to-Order custom products ship within one to two weeks (typical).


Configurator

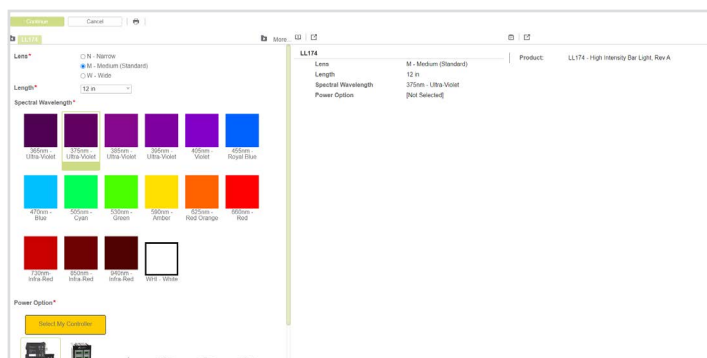


Need a build-to-order custom lighting solution in 2 weeks or less? Advanced Illumination's online configurator helps you tailor our LL174 High Intensity Bar Light Series to your specific needs. For a guided configuration, [visit our online configurator](#).

Optical Information

Intensity Characteristics


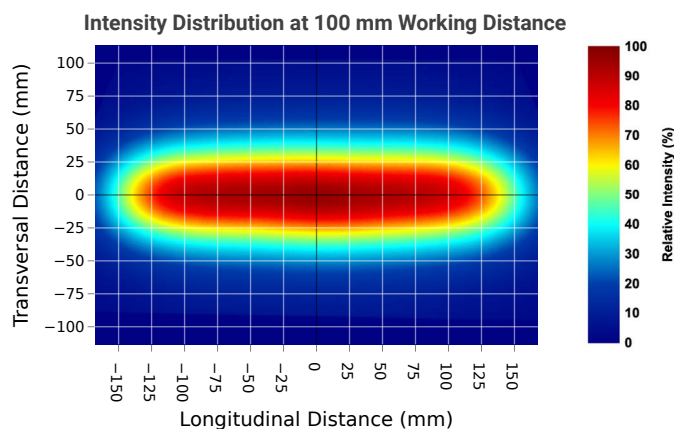


Intensity distribution sample image above taken with a 12-inch white medium lensed LL174 unit.

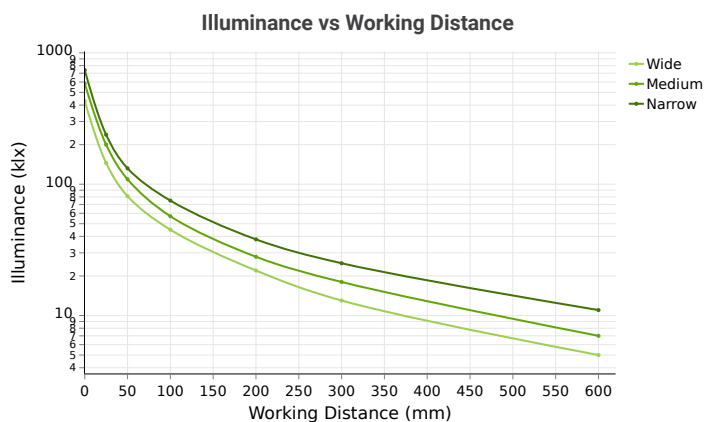


Data shown above have been collected using a 12-inch white LL174 unit.

FWHM vs Working Distance

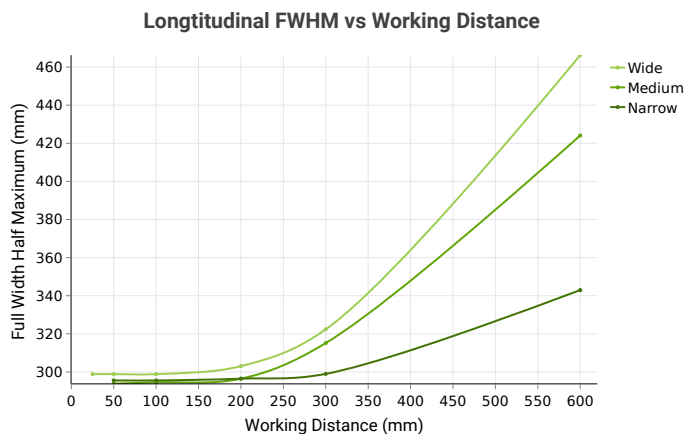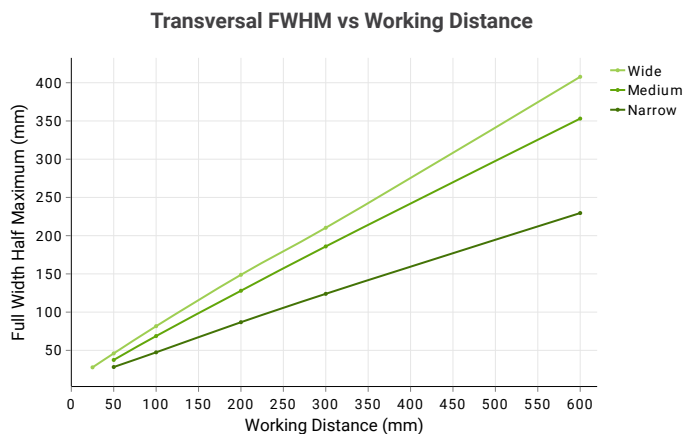

Both Full Width Half Maximum (FWHM) vs Working Distance plots shown above have been measured using a 12-inch white LL174 unit.

Continuous vs Pulsed Intensity

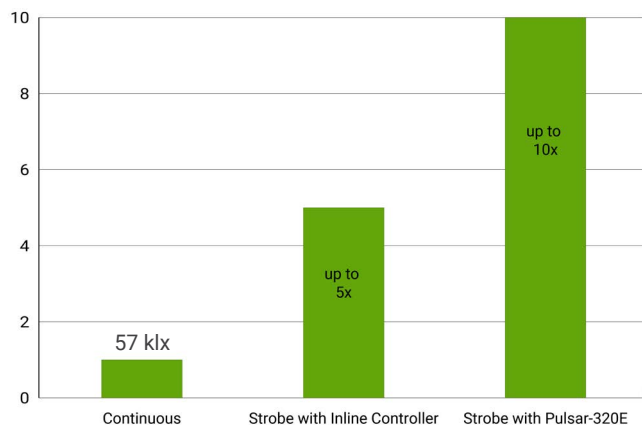


Under continuous operation, a 12-inch white medium lensed LL174 unit will output an **illuminance of 57 klx** and an **irradiance of 187 W/m²** at a 100 mm working distance. For applications that require higher output, the LL174 Series has been engineered to be overdrive strobe capable. When configured with AI's strobe enabled Inline Controller (I3, I3S, and I4), the LL174 is capable of outputting up-to 5X continuous levels. When configured with a C5 connector, compatible with AI's Pulsar 320E, an **LL174 can be strobed up-to 10X continuous intensity levels.**

Disclaimer: The measurements provided above are for approximations only and may vary depending on the method of measurement and the specific configuration being measured.

Optical Information - Continued

White Spectral Profile

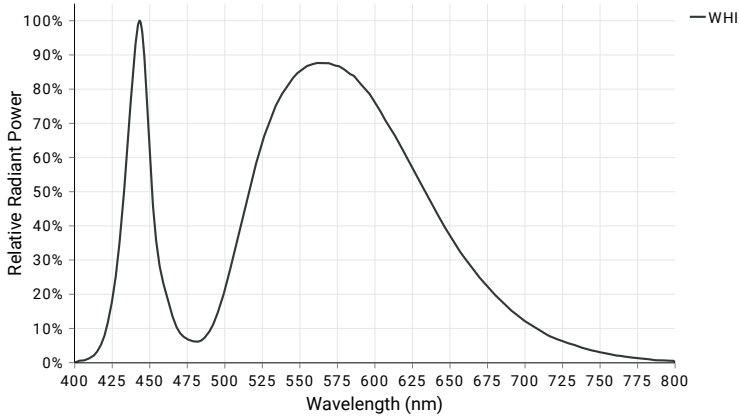


White LED illumination is the most commonly used machine vision lighting configuration. It is often the default choice when specific features of interest do not require color-based highlighting. However, [white LEDs can vary in color temperature, which can impact machine vision systems](#), specifically when matching white light sources.

The LL174 Series white LEDs have a relatively neutral color correlated temperature (CCT) of **5500k**.

For a more detailed look at the white spectral data, download the [csv file of the raw spectral values](#) and refer to our [Product Spectra Distribution Charts PDF](#).

Visible Spectral Profiles

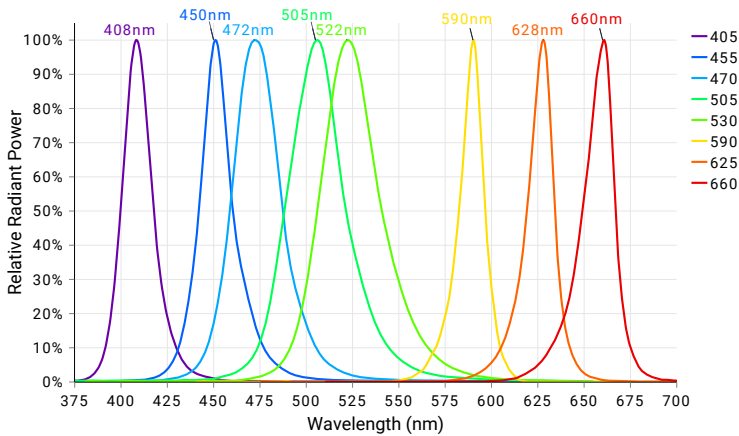


Visible color illumination consists of using wavelengths between 400-700 nm to either create or eliminate contrast on an inspection subject based on differences in a features color hue. When referring to a color wheel, simply remember the following; like colors reflect and brighten surfaces; conversely, opposing colors absorb and darken surfaces.

The LL174 is available in **405 nm, 455 nm, 470 nm, 505 nm, 530 nm, 590 nm, 625 nm, and 660 nm** visible color configurations.

For a more detailed look at the visible color spectral data, download the [csv file of the raw spectral values](#) and refer to our [Product Spectra Distribution Charts PDF](#).

Non-Visible Spectral Profiles

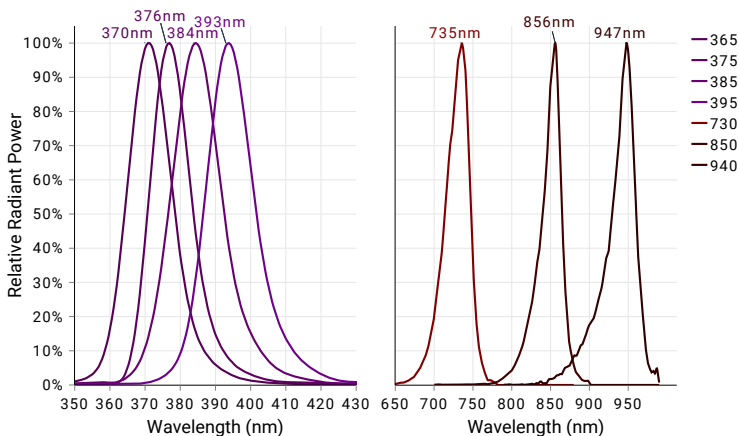

Near-infrared (NIR) and ultraviolet A (UVA) imaging are machine vision techniques that utilize wavelengths outside the visible spectrum. NIR light, with wavelengths between 700-1000 nm, can penetrate certain materials opaque to visible light, making it ideal for fill-level inspection, circuit board analysis, food safety inspection, and medical imaging. In contrast, UVA light, typically ranging between 315-400 nm, interacts with specific materials to induce fluorescence or highlight surface features, useful in applications like counterfeit detection, leak detection, and contamination detection.

The LL174 Series is available in **365 nm, 375 nm, 385 nm, 395 nm, 730 nm, 850 nm, and 940 nm**, configurations.

For a more detailed look at the NIR or UVA spectral data, download the [csv file of the raw spectral values](#) and refer to our [Product Spectra Distribution Charts PDF](#).

Disclaimer: The measurements provided above are for approximations only and may vary depending on the method of measurement and the specific configuration being measured.

Optical Information - Continued

Polarization Option Detail

Non-polarized



Polarized



Polarization can be used in a variety of ways, such as to reduce glare on specular surfaces or to increase edge clarity of transparent injection-molded objects, as shown above. This is known as cross-polarization. When unpolarized light passes through two cross-polarized filters (oriented 90 degrees perpendicular to each other), it is completely blocked. However, if the light is already polarized, it will only be blocked if its polarization is perpendicular to the axis of the second polarizer, creating the cross-polarization effect shown above.

Photobiological Risk Factors

Group	Description	Affected Wavelengths
Exempt	No Photobiological Hazard	730 nm, 880 nm
Group 1	No Photobiological hazard under normal behavioral limitations	405 nm, 455 nm, 470 nm, 505 nm, 530 nm, 590 nm, 625 nm, White
Group 2	Does not pose a hazard due to aversion response to bright light or thermal discomfort	365 nm, 375 nm, 385 nm, 395 nm

Advanced Illumination's lighting products have been tested and classified to IEC standards by accredited testing services. For more information on photobiological risk factors, please view the following PDF: <https://www.advancedillumination.com/wp-content/uploads/2019/04/IEC-040119.pdf>

Cleaning Guidelines



To clean our light's optics, it is best to only clean when necessary. Dusting is always the first step in cleaning your optics. Wiping a dusty optic is like cleaning it with sandpaper. So always dust with a canned air duster or compressed and filtered air before wiping any optic. If the dusted optic has no visible stains after you dust it, then remember: "If it's not dirty, don't clean it." Avoid wiping optics when possible.

If dusting did not clean the lens or the lens has stains, use only de-ionized water and mild dish soap with a low lint cloth designed for optics to avoid damage to the optic by any harsh chemicals.

Polarizers, beam splitters and collimated films should never be wiped with any type of cloth or solvent, only use the air dusting method to clean these types of optics.

The aluminum housing can be wiped down when dusting is not a sufficient means to thoroughly clean.

Bar Light Comparison Matrix

Not finding the optical specifications you are looking for with the ____ Series? Refer to the bar light comparison matrix below to compare and contrast Advanced Illumination's comprehensive product offering:

Attributes	AL295		LL174			AL247			AL116	AL126	AL150
Lens Type	Medium (M)	Wide (W)	Narrow (N)	Medium (M)	Wide (W)	Narrow (N)	Medium (M)	Wide (W)	No Lenses	No Lenses	Aimed
Beam Angle	20°	32°	10°	25°	40°	10°	25°	40°	70°	60°	N/A
Beam Direction	Normal		Normal			Normal			Normal	Normal	Oblique
Intensity at 100 mm WD	88 klx	65 klx	75 klx	57 klx	45 klx	84 klx	67 klx	48 klx	32 klx	14 klx	2.2 klx
	288 W/m ²	208 W/m ²	250 W/m ²	187 W/m ²	146 W/m ²	277 W/m ²	218 W/m ²	155 W/m ²	110 W/m ²	48 W/m ²	8.5 W/m ²
Transversal FWHM at 600 mm WD	12.79 in (325 mm)	15.12 in (384 mm)	9.06 in (230 mm)	13.90 in (353 mm)	16.06 in (408 mm)	9.57 in (243 mm)	11.38 in (289 mm)	15.87 in (403 mm)	31.54 in (801 mm)	23.31 in (592 mm)	N/A
Longitudinal FWHM at 600 mm WD	15.95 in (405 mm)	17.72 in (450 mm)	13.50 in (343 mm)	16.69 in (424 mm)	18.35 in (466 mm)	13.58 in (345 mm)	14.65 in (372 mm)	18.03 in (458 mm)	46.34 in (1177 mm)	31.26 in (794 mm)	N/A
Minimum Working Distance	0.98 in (25 mm)	0.79 in (20 mm)	3.94 in (100 mm)	1.97 in (50 mm)	1.46 in (37 mm)	3.94 in (100 mm)	1.97 in (50 mm)	1.46 in (37 mm)	0.47 in (12 mm)	0.47 in (12 mm)	0.47 in (12 mm)
Light Width	0.79 in (20.0 mm)		1.33 in (33.8 mm)			1.69 in (42.9 mm)			0.79 in (20 mm)	1.27 in (32 mm)	1.33 in (34 mm)
Light Height	0.79 in (20.1 mm)		1.12 in (28.4 mm)			0.95 in (24.0 mm)			0.79 in (20 mm)	0.79 in (20 mm)	1.12 in (28 mm)
Longest Emitting Window Length	41.61 in (1057 mm)		96.72 in (2457 mm)			24 in (610 mm)			20.27 in (515 mm)	41.42 in (1052 mm)	82.12 in (2086 mm)
Sizes Available	14	14	16	16	16	4	4	4	10	20	80
Visible Wavelengths Available	9	8	8	9	8	7	7	7	7	7	4
UV Wavelengths Available	4	0	0	4	0	0	0	0	4	4	1
IR Wavelengths Available	3	3	3	3	3	3	3	3	2	2	1
Polarization Available	No	No	Yes	Yes	Yes	No	No	No	Yes	Yes	Yes
Diffusion Available	Yes	Yes	Yes	Yes	Yes	No	No	No	Yes	Yes	Yes
IP Rating	IP50		IP50			IP69K			IP50	IP50	IP50
Price	\$\$	\$\$	\$\$	\$\$	\$\$	\$\$\$	\$\$\$	\$\$\$	\$\$	\$	\$\$\$\$

To ensure consistent comparisons, all data presented above is based on 12-inch white LED models unless explicitly stated otherwise. Additionally, all measurements provided above are derived from "standard" configurations, excluding sealed models if available as optional.


If you are still not finding the optical specifications needed for your application, [inquire](#) about our semi-custom and full-custom capabilities.

Disclaimer: The measurements provided above are for approximations only and may vary depending on the method of measurement and the specific configuration being measured.

Bar Light Comparison Matrix - Definitions

For definitions on the terminology used on the previous page, please refer to the table below:


Definitions	
Beam Angle	FWHM (Full Width Half Maximum)

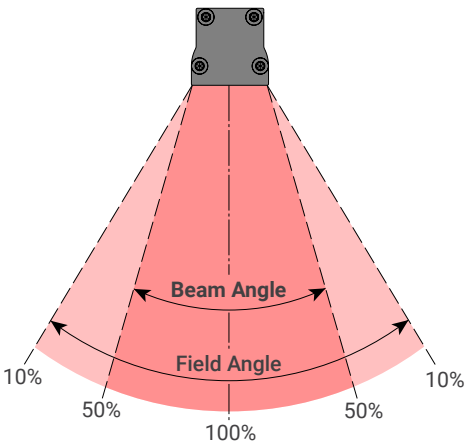


Beam Angle defines the spread of usable light from a projected machine vision light source. It's the angle where the intensity drops to 50% of its peak (FWHM). Beam angle dictates the concentrated, higher-intensity portion of the Field of View (FOV). Field angle is wider, encompassing the total spread of light down to 10% of peak intensity.

FWHM (Full Width Half Maximum) is a measure of the width of a light source's intensity distribution. Specifically, it defines the distance between the points on the intensity profile where the light intensity drops to 50% of its peak value. This FWHM distance is often used to determine the usable FOV (Field of View) when aiming a light at a surface for inspection.

Beam Direction	Longitudinal vs Transversal
----------------	-----------------------------

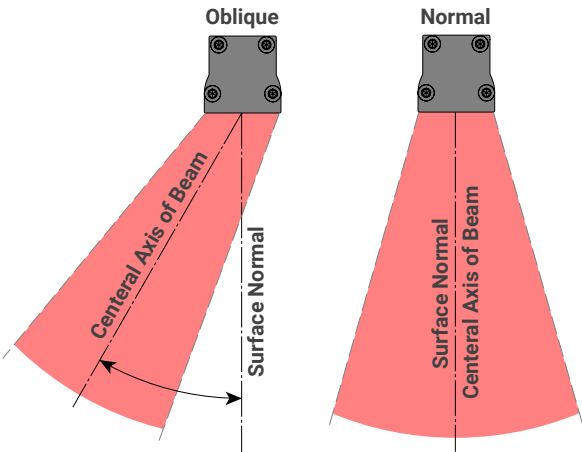

A normal beam direction refers to light emitted perpendicular to the light source's emitting surface, in which the central optical axis is co-linear to the surface normal of the emitting window. An oblique beam direction describes light emitted at an angle relative to the light source's surface normal. Oblique sources can be useful when imaging specular surfaces, depending on system geometry.

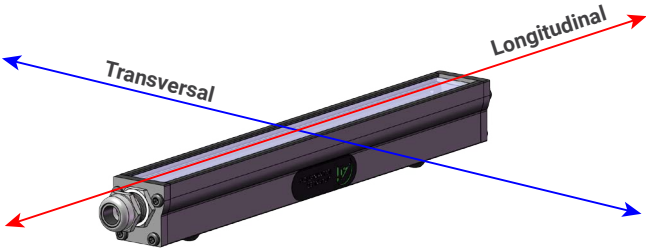

The longitudinal direction refers to the direction that runs parallel to the long axis of the light source. This is typically the longest dimension of the light source housing or emitting surface.


The transversal direction, in contrast, refers to any direction that is perpendicular to the longitudinal direction. It essentially describes any direction that "cuts across" the long axis of the light source.

Disclaimer: The measurements provided above are for approximations only and may vary depending on the method of measurement and the specific configuration being measured.

Mechanical Information


Installation Drawings

Heatsink Configuration

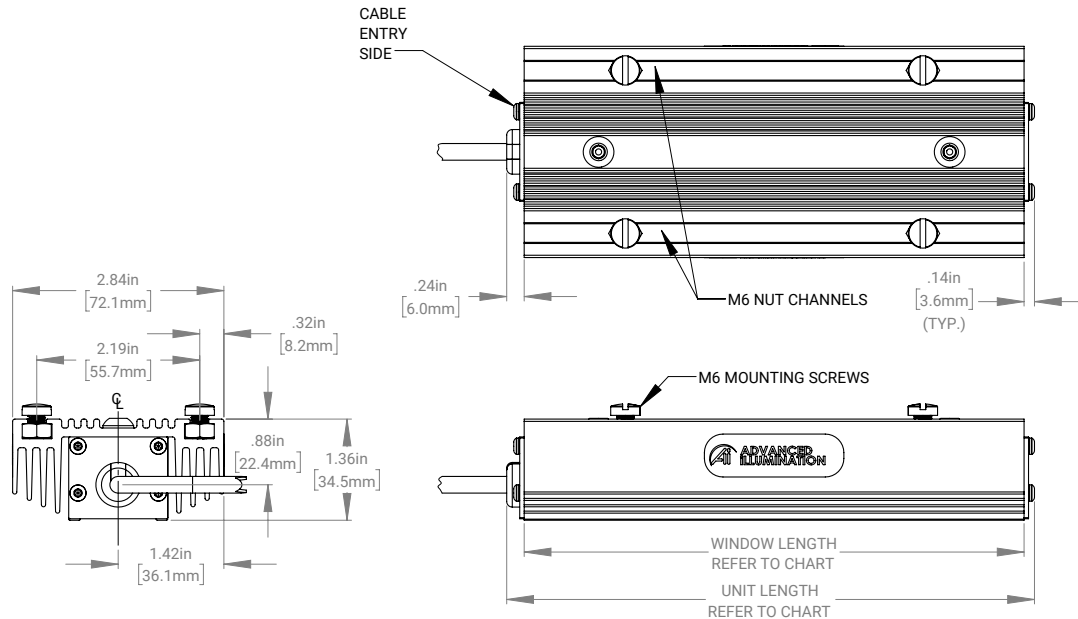

For full installation drawings and complete CAD models of this heatsink configuration, please visit the [downloads](#) section of the product webpage.


Non-Sealed Configuration

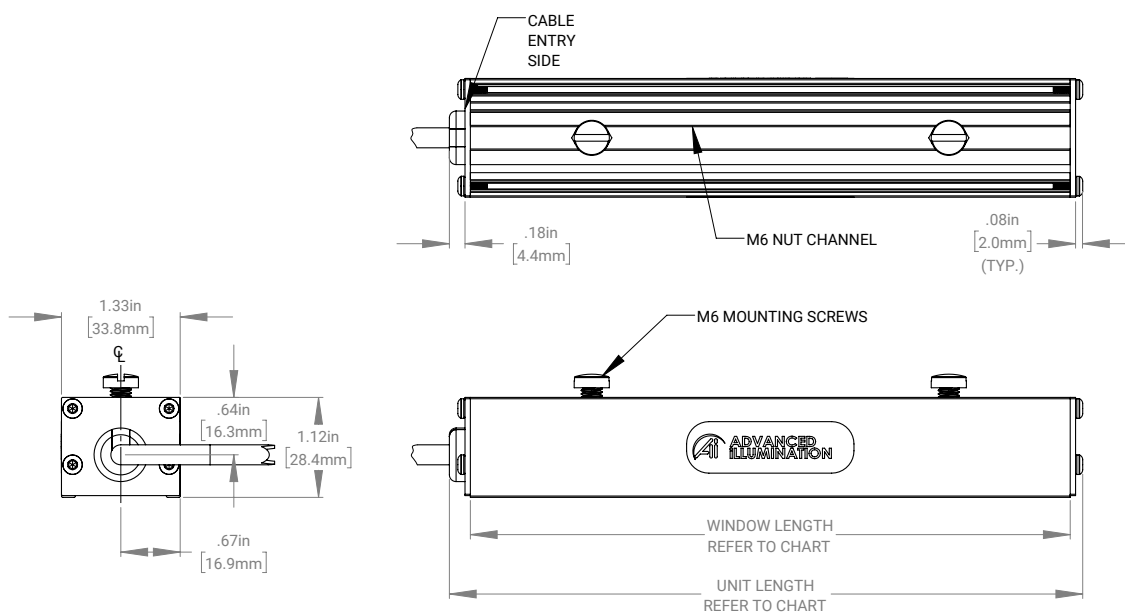

For full installation drawings and complete CAD models of this nonsealed configuration, please visit the [downloads](#) section of the product webpage.

Mechanical Information - Continued

Installation Drawings - Continued

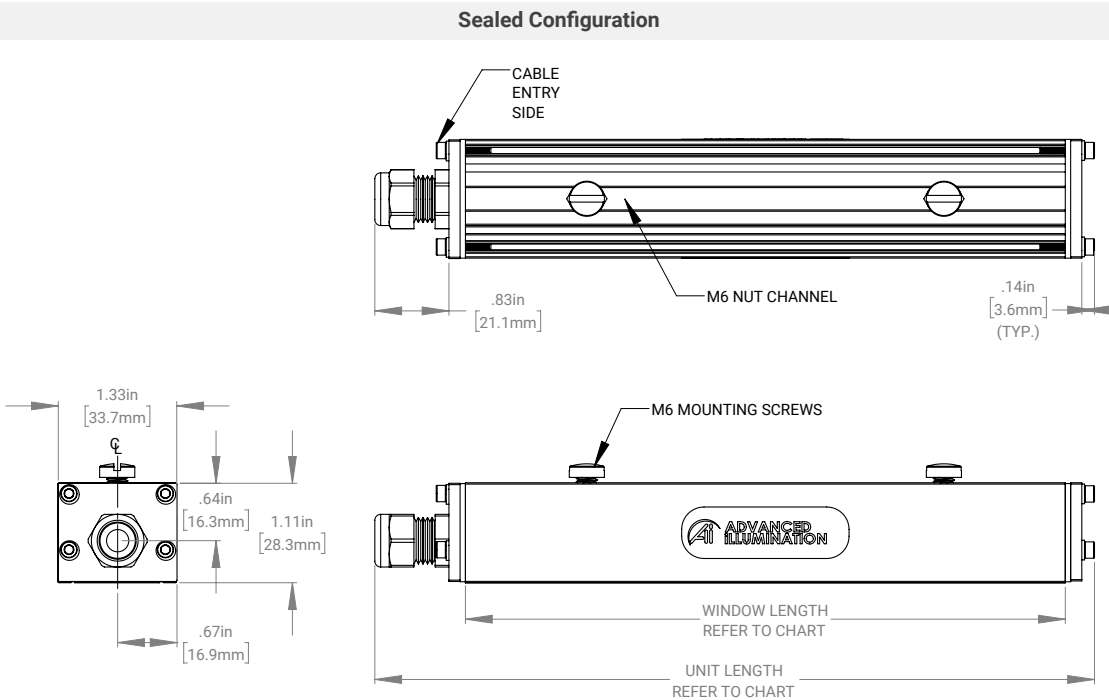

For full installation drawings and complete CAD models of this sealed configuration, please visit the [downloads section of the product webpage](#).

Sizing Chart

Part Number	Length (Inches)						Length (Millimeters)					
	Non-Washdown		Washdown		Heatsink		Non-Washdown		Washdown		Heatsink	
	Unit	Window	Unit	Window	Unit	Window	Unit	Window	Unit	Window	Unit	Window
LL17406	7.1	6.72	8.06	6.72	7.1	6.72	180.34	170.688	204.724	170.688	180.34	170.688
LL17412	13.1	12.72	14.06	12.72	13.1	12.72	332.74	323.088	357.124	323.088	332.74	323.088
LL17418	19.1	18.72	20.06	18.72	19.1	18.72	485.14	475.488	509.524	475.488	485.14	475.488
LL17424	25.1	24.72	26.06	24.72	25.1	24.72	637.54	627.888	661.924	627.888	637.54	627.888
LL17430	31.1	30.72	32.06	30.72	31.1	30.72	789.94	780.288	814.324	780.288	789.94	780.288
LL17436	37.1	36.72	38.06	36.72	37.1	36.72	942.34	932.688	966.724	932.688	942.34	932.688
LL17442	43.1	42.72	44.06	42.72	43.1	42.72	1094.74	1085.088	1119.124	1085.088	1094.74	1085.088
LL17448	49.1	48.72	50.06	48.72	49.1	48.72	1247.14	1237.488	1271.524	1237.488	1247.14	1237.488
LL17454	55.1	54.72			55.1	54.72	1399.54	1389.888			1399.54	1389.888
LL17460	61.1	60.72			61.1	60.72	1551.94	1542.288			1551.94	1542.288
LL17466	67.1	66.72			67.1	66.72	1704.34	1694.688			1704.34	1694.688
LL17472	73.1	72.72			73.1	72.72	1856.74	1847.088			1856.74	1847.088
LL17478	79.1	78.72					2009.14	1999.488				
LL17484	85.1	84.72					2161.54	2151.888				
LL17490	91.1	90.72					2313.94	2304.288				
LL17496	97.1	96.72					2466.34	2456.688				

Electrical Information

Power Requirements

Current Required for Power Supply Sizing

Wavelengths	Configured w/ Voltage Drive (24)	Configured w/ Standard Controller (IC, I3, I3S, I4, C1, C5)
WHI	0.062A per linear inch	0.068A per linear inch
365 nm, 375 nm, 385 nm, 395 nm, 405 nm	0.059A per linear inch	0.050A per linear inch
455 nm, 470 nm, 505 nm, 530 nm, 625 nm, 660 nm, 730 nm, 850 nm, 940 nm	0.062A per linear inch	0.068A per linear inch

Note: All Advanced Illumination lights and controllers are nominally powered by 24V DC unless otherwise noted. Strobe overdriving with controller based models may require more current and voltage overhead. The values above do not include background current draw from the controller (~100 mA total).

Control Options

Controller Image	Controller Details	Connector Image
	DCS Single Output Controller - Compatible with C1 Configurations PN: DCS-100E The DCS-100E is a compact, din-rail mounted general-purpose external controller with one C1 output connector, wired with three channels. Capable of providing single channel control or multi-channel control for RGB compatible lights. Output Power: 90 W Max Continuous, 540 W Max Pulsed (Overdrive Strobe) Output Current: 4.5A Max Continuous, 15 A Max Pulsed I/Os: 3 External Trigger Inputs Interface: 10/100 Ethernet with Software and browser-based GUIs. SDKs are also available. For more information about our DCS-100E, please visit the controller product page.	
	DCS Triple Output Controller - Compatible with C1 Configurations PN: DCS-103E The DCS-103E is a din-rail mounted general-purpose multi-light controller with three C1 output connectors. Capable of driving three lights in sync or asynchronously. Output Power: 30 W Max Continuous / Output, 180 W Max Pulsed / Output Output Current: 1.5A Max Continuous / Output, 5 A Max Pulsed / Output I/Os: 3 External Trigger Inputs Interface: 10/100 Ethernet with Software and browser-based GUIs. SDKs are also available. For more information about our DCS-103E, please visit the controller product page.	
	Pulsar 320E High Current Controller - Compatible with C5 Configuration PN: Pulsar 320E The Pulsar 320E is a high-power, dual output, pulse-only controller geared for overdriving driving lights at very short flash durations with very high current. Output Power: 2500 W Max Pulsed / Output Output Current: 50 A Max Pulsed / Output I/Os: 2 External Trigger Inputs Interface: 10/100 Ethernet with Software GUI. SDKs are also available. For more information about our Pulsar 320E, please visit the controller product page.	

Electrical Information - Continued

Control Options - Continued

Inline Controller - Continuous Only - IC Configurations

PN: N/A

The IC is an inline, cable-mounted continuous-only controller configured/wired directly for the ordered light head.

Output Power: 25 W Max Continuous

Output Current: 1.25 A Max Continuous

I/O: 1 0-10 V Analog Dimming Input

Interface: Direct Cable (flying leads or optional connector)

For more information about our IC Controller please [visit the controller product page](#).

Inline Controller - Strobe and Continuous - I3 & I3S Configurations

PN: N/A

The I3 and I3S are inline, cable-mounted continuous and pulse (overdrive strobe) capable controllers configured/wired directly for the ordered light head. When operated in pulsed mode, the I3 is a default-on device on power up, whereas the I3S is default-off, requiring a trigger to illuminate.

Output Power: 25 W Max Continuous, 125 W Max Pulsed

Output Current: 1.25 A Max Continuous, 8 A Max Pulsed (Load Dependent)

I/Os: 1 Gated Trigger Signal, 1 0-10 V Analog Dimming Input

Interface: Direct Cable (flying leads or optional connector)

For more information about our I3/I3S Controller, please [visit the controller product page](#).

Inline Controller - Strobe and Continuous - I4 Configurations

PN: N/A

The I4 is an inline, cable-mounted continuous and pulse (overdrive strobe) capable controller configured/wired directly for the ordered light head. The I4 can either be operated with a PNP or NPN trigger signal.

Output Power: 50 W Max Continuous, 150 W Max Pulsed

Output Current: 2.1 A Max Continuous, 8 A Max Pulsed (Load Dependent)

I/Os: 1 Gated Trigger Signal, 1 0-10 V Analog Dimming Input

Interface: Direct Cable (flying leads or optional connector)

For more information about our IC Controller please [visit the controller product page](#).




24V Driver - Continuous Only - 24 Configurations

PN: N/A

24V option allows lights to operate continuous output with 24V connection and no additional controllers.

Modes: Continuous, can be wired to some 3rd party controllers or external relays for gated operation


Interface: Direct cable (flying leads or connector options)

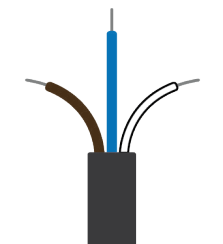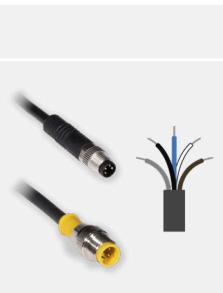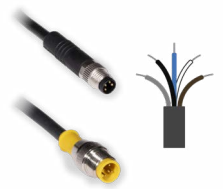

Electrical Information - Continued


Inline Control Option Wiring Information

Standard Flying Lead and Optional M12 Connector Pinout Functions

Pin (M12)	Wire Color	24V Functions	IC Functions	I3/I3S Functions	I4 Functions	M12 Pinout
1	BROWN	24V DC	24V DC	24V DC	24 V DC	 5-Position Male Connector
2	WHITE	N/A	0-10V Analog Control	Reserved	NPN/Active Low Trigger	
3	BLUE	DC GND	DC GND	DC GND	DC GND	
4	BLACK	N/A	Gate Low	PNP/Active High Trigger	PNP/Active High Trigger	
5	GRAY	N/A	N/A	0-10V Analog Control	0-10 V Analog Dimming	

The functions above are only applicable when ordering an EC power configuration.

Optional M8 Connector Pinout Functions

Pin (M8)	Wire Color	24V Functions	IC Functions	I3/I3S Functions	I4 Functions	M8 Pinout
1	BROWN	24V DC	24V DC	24V DC	24 V DC	 4-Position Male Connector
2	WHITE	N/A	0-10V Analog Control	Reserved	Active Low Trigger	
3	BLUE	DC GND	DC GND	DC GND	DC GND	
4	BLACK	N/A	Gate Low	Active High Trigger	Active High Trigger	

The functions above are only applicable when ordering an 24, IC, I3, I3s, or I4 power configuration with our without an M8 connector. For more wiring information pertaining to strobing and dimming functionality, please download the controller manuals and datasheets.

Accessories

Advanced Illumination offers a variety of accessories designed to pair with our lighting and control products. Below you will find a table of accessories which are compatible with many configurations of the BL2 series.

Category	Accessory Image	Accessory Detail
Power Supply		24 Volt DC Power Supply PN: PS24-TL This convenient power source is a universal AC input switching power supply with a regulated output DC current. The power supply comes with an LED Power Indicator, tinned leads marked Positive (+) and Negative (-) and 2 WAGO connectors for simplified assembly. For more information about our 24 Volt DC Power Supply, please visit this webpage .
Dimmer		Manual Dimming Accessory for the IC, I3, I3s and I4 PN: DCS-MP The DCS-MP is a 30-position potentiometer, detented for precision level control and provides repeatable dimming with cable inline controllers. Features include DIN-rail mountable, a flip up cover to prevent accidental adjustments, spring clamp wiring terminal for flying leads or an M12 connector for use with the IC, I3/I3S or I4 Inline Controllers. For more information about our Manual Dimming Accessory please visit this webpage .

Accessories - Continued

Category	Accessory Image	Accessory Detail
Extension Cable		DCS-100E/103E Extension Cable, Single Light Power Cable - C1 Configuration PN: LC-XX-S This extension cable was designed for applications requiring power cables longer than the standard 2 meters provided with Ai lights. This single light cable features a single male and single female 7 pin locking connector (C1) and can be purchased in 3 - 15-meter lengths. For more information about our DCS-100E/103E Extension Cable, Single Output, please visit this webpage.
Extension Cable		DCS-100E/103E Extension Cable, Dual Light Power Cable - C1 Configuration PN: LC-XX-Y This extension cable was designed for applications requiring two identical lights to be powered through a single controller. These Y cables feature a single male and dual female 7 pin locking connectors (C1) and can be purchased in 3 - 15-meter lengths. See attached spec sheet for compatible light configuration. For more information about our DCS-100E/103E Extension Cable, Split Output, please visit this webpage.
Extension Cable		Pulsar 320E Extension Cable - C5 Configuration PN: LC-XX-S-C5 This extension cable was designed for applications requiring power cables longer than the standard 2 meters provided with Ai lights. This single light cable features a single male and single female Pulsar 320 connector (C5) and can be purchased in 3 - 15 meter lengths. For more information about our Pulsar 320E Extension Cable, please visit this webpage.
Adaptor Cable		Cognex Gen2 Inline Controller Adaptor Cable PN: AD-I3-CGX2 This cable adaptor is for connecting I3/I3S configured lights with Cognex Gen2 Cameras, and comes with a male to female M12 connectors. For more information about our Cognex Gen2 Inline Controller Adaptor Cable, please visit this webpage.
Filters		Camera Lens Band Pass Filters PN: BPXXX-YYY Eliminating all but a narrow band of light (+/- 40nm) centered on the specified wavelength, band pass filters are used to enhance colors, or to stop unwanted ambient light from reaching the camera. Filtering can replace existing shrouds, simplifying the physical set up of an inspection site. Ai offers 635nm and 660nm band pass filters to fit several different lens sizes. For more information about our Camera Lens Band Pass Filters, please visit this webpage.
Mounting Brackets		Mounting Brackets PN: LB Fastens to the M6 mounting channel for simplified mounting. Included in product purchase. For more information about our Mounting Brackets, please visit this webpage.

Additional Information

Warranty

Every Advanced illumination, Inc. (Ai) product is thoroughly inspected and tested before leaving the factory. Products are warranted to be free of defects in workmanship and materials for a period of FIVE YEARS from the original date of purchase. Should a defect develop during this period, customers may return the complete product, freight prepaid, to one of Ai's distributors or to the Ai factory. All product warranty returns require a Return Merchandise Authorization (RMA) number which is obtained from Customer Service. The RMA number must be clearly marked on the outside of the package. Ai will inspect the unit, and if a defect is found will, at our option, repair or replace the product without charge. Ai disclaims liability for any implied warranties, including implied warranties of "merchantability" and "fitness for a specific purpose." For products under warranty that have since been discontinued, Ai will make an effort to replace with equivalent parts; for circumstances that do not allow for equivalent replacement, Ai reserves the right to repair or replace these products with an updated version. Ai cannot be held responsible for the unauthorized or inappropriate use of its products. Any unauthorized repair or modifications will result in a voided warranty. No Liability for Consequential Damages: In no event shall Ai be liable for any consequential, special, incidental, or indirect damages of any kind arising from the sale or use of the products.

Compliance

Our lighting products are designed and tested to meet CE, RoHS, and IEC standards. As a global ISO 9001 certified company, we understand the importance of compliance and perform accelerated testing on every product before shipment. For more information on our compliance standards, please see our compliance documentation here: <https://www.advancedillumination.com/services/compliance-statements/>

Electromagnetic Compatibility

This product was tested and complies with the regulatory requirements and limits for electromagnetic compatibility (EMC) as stated in the product specifications. These requirements and limits are designed to provide reasonable protection against harmful interference only when the product is operated in its intended industrial electromagnetic environment. To minimize the potential for electromagnetic interference or unacceptable performance degradation, install and use this product in strict accordance with the instructions in the product documentation.

Customer Service

For information on existing orders, or to make an order adjustment, contact us Monday through Friday 8:00 am to 5:00 pm ET or send an email to orders@advancedillumination.com.

Company Information

Advanced Illumination
440 State Garage Road, Rochester, VT 05767
Phone: +1 (802) 767 3830
Fax: +1 (802) 767 2636
Email: info@advancedillumination.com
Web: advancedillumination.com
© 2023 Advanced illumination Inc. All rights reserved