

DF198

MicroBrite™ Diffuse Ring Light Series Product Datasheet



MicroBrite™ Diffuse Ring Light Series Description

Aborerferunt harchitatur, autatio. Ita nonseror mo ipeiendi rectasp erspernatur sernatquo ipit pa con reribus mi, offic tectasp itiust explis ut quis am rerios es vel magnis quaecus saperferibus voluptusant, eliquo bea as architium vereium, nit exces natur rescit quia illento mi, aut quias rat quaese ad ut omnist, ut qui nonsendianis sinvenet etures quam, sit utaqui voluptae volore volorec turereicidem net imusam ernam aut hitat am consequo et ande pliquodi re, que niminctur?

Catibusam quia vereceptis arunt laborrum re volore et, est il mil molupti orehenet, as et ut la duciaturs doluptus cus est vellabo rovid explabori cone milia doluptatem consenem fuga. Itatis adignim usaest omnis restrum inctem reptatibus. It quam acerior molliti onsemi sequae nostio mosam cone et



High Intensity



Scalable Design



5 Wavelengths Available



Collimation & Polarization



1-2 Week Lead Times

General Information

General Specifications

Category	Specification			Detail	
Optical	Available Wavelengths			White, 455 nm, 530 nm, 625 nm, RGB	
	Available Lensing			No Lenses	
	Available Light Conditioning			None	
Electrical	Power Consumption Info			See Power Requirements on Page 11	
	Cable Info			80" -0/+6" Long (2 m -0/+150 mm), -105 °C Rated, Foil Shield w/ Drain	
Mechanical	Sizing Info	Standard	Diameter	1.97" (50.00 mm) to 11.02" (280.0 mm)	See Page 8 for More Details
			Height	.56" (14.1 mm) to .62" (15.7 mm)	
	Weight Info (Standard)			~ 0.14 lbs (~63 g) per DF198-050 Unit, ~ 0.28 lbs (~127 g) per DF198-115 Unit, ~ 0.50 lbs (~226 g) per DF198-180 Unit, ~ 0.79 lbs (~358 g) per DF198-280 Unit,	
	Mounting Info			M4 Mounting Holes , See Page _ for More Details	
Material Info			Anodized Aluminum Housing, Acrylic Window, PVC Cable Jacket, Steel Black Oxide Fasteners		
Thermal	Operating Case Temperatures			25 °C to 60 °C	
	Operating Ambient Temperatures			0 °C to 35 °C	
Certification	Compliance			CE, RoHS, IEC 62471	
	IP Rating			IP40	
	Lumen Maintenance - White Only			L70 (50,000 Hours)	

General Information - Continued

Part Number Key

Model	-	Outer Diameter (mm)	Illuminated Field of View (mm)	Connector/Control	-	Alternative Connector
DF198	-	XXX	XX	XX	X	X
DF198		050	455 (royal blue)	C1		M8 ¹
		115	530 (green)	C5		M12 ¹
		180	625 (red)	IC		
		280	WHI (white)	I3		
			RGB (all colors) ³	I3S		
				24 ²		
more info on page		8	5	10		6


Example Part Numbers:
DF198-100WHI3

¹Available with IC, I3, I3S, and 24 V options only
²The 24 V version will have a lower output intensity by ~10-15% and operate at a temperature ~10-15% higher than other options; not available in 50 mm outer diameter
³Available with C1 connector only

In Stock Lead Times

Unavailable Stock products ship within three days.
Build-to-Order custom products ship within one to three weeks.


Configurator

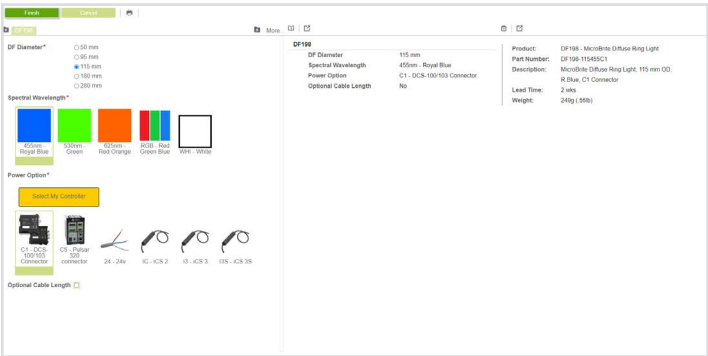

Need a build-to-order custom lighting solution in 3 weeks or less? Advanced Illumination's online configurator helps you tailor our DF198 High Dispersion Wide Bar Light Series to your specific needs. For a guided configuration, [visit our online configurator](#).

Optical Information

Intensity Distribution Sample

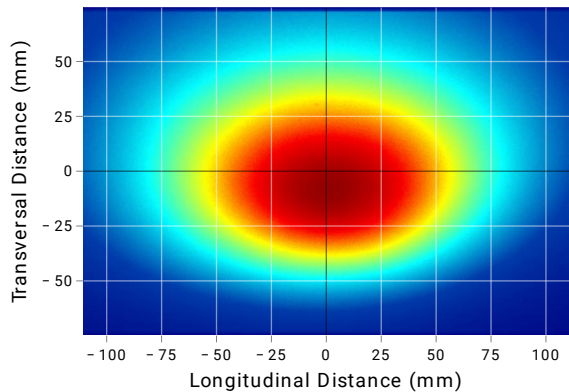

Volorehent. Rem natur? Sed ulla dolupta speriberchit maxime sit, volut inverias aliquet et et fugit maximodion peritat velic te quis di torrovit, optat enessunt. Vit reperor ehenemp oratus es nam quibusa ndellab is dio. Optis dolora nus ides doluptat re la et doloribus ipsunt volo magnis est, ipiti sedipsamus, omnis int fuga. Tionet laut et volorum volori do-luptaqui netur molupturem verum faccus necabor eritatum a disciatem eium que rem veliam, odia cus. Nequam et fuga. Ehene simusanitem. Ut ide porum voluptas dis ne aborio doluptio tecatiae aut vid quis dignimi ligenih illuptatem aut ut et aliquudent id et in cor anis rectet volecab ipiendi dem eatem isque rem.


Volorehent. Rem natur? Sed ulla dolupta speriberchit maxime sit, volut inverias aliquet et et fugit maximodion peritat velic te quis di torrovit, optat enessunt. Vit reperor ehenemp oratus es nam quibusa ndellab is dio. Optis dolora nus ides doluptat re la et doloribus ipsunt volo magnis est, ipiti sedipsamus, omnis int fuga. Tionet laut et volorum volori do-luptaqui netur molupturem verum faccus necabor eritatum a disciatem eium que rem veliam, odia cus. Nequam et fuga. Ehene simusanitem. Ut

Uniformity Profile Plot

Volorehent. Rem natur? Sed ulla dolupta speriberchit maxime sit, volut inverias aliquet et et fugit maximodion peritat velic te quis di torrovit, optat enessunt. Vit reperor ehenemp oratus es nam quibusa ndellab is dio. Optis dolora nus ides doluptat re la et doloribus ipsunt volo magnis est, ipiti sedipsamus, omnis int fuga. Tionet laut et volorum volori do-luptaqui netur molupturem verum faccus necabor eritatum a disciatem eium que rem veliam, odia cus. Nequam et fuga. Ehene simusanitem. Ut ide porum voluptas dis ne aborio doluptio tecatiae aut vid quis dignimi ligenih illuptatem aut ut et aliquudent id et in cor anis rectet volecab ipiendi dem eatem isque rem.

Volorehent. Rem natur? Sed ulla dolupta speriberchit maxime sit, volut inverias aliquet et et fugit maximodion peritat velic te quis di torrovit, optat enessunt. Vit reperor ehenemp oratus es nam quibusa ndellab is dio. Optis dolora nus ides doluptat re la et doloribus ipsunt volo magnis est, ipiti sedipsamus, omnis int fuga. Tionet laut et volorum volori do-luptaqui netur molupturem verum faccus necabor eritatum a disciatem eium que rem veliam, odia cus. Nequam et fuga. Ehene simusanitem. Ut


Continuous vs Pulsed Intensity

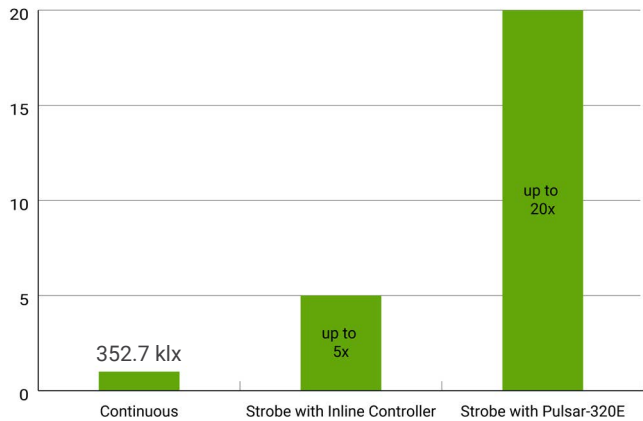

Under continuous operation, a 50 mm white DF198 unit will output an **illuminance of 352.7 klx** and an **irradiance of 1053 W/m²** at the emitting surface. For applications that require higher output, the DF198 Series has been engineered to be overdrive strobe capable. When configured with AI's strobe enabled Inline Controller (ICS-3 and ICS-3S), the DF198 is capable of outputting up-to 5X continuous levels. When configured with a C5 connector, compatible with AI's Pulsar 320, a **DF198 can be strobed up-to 20X continuous intensity levels.**

Optical Information - Continued

White Spectral Profile

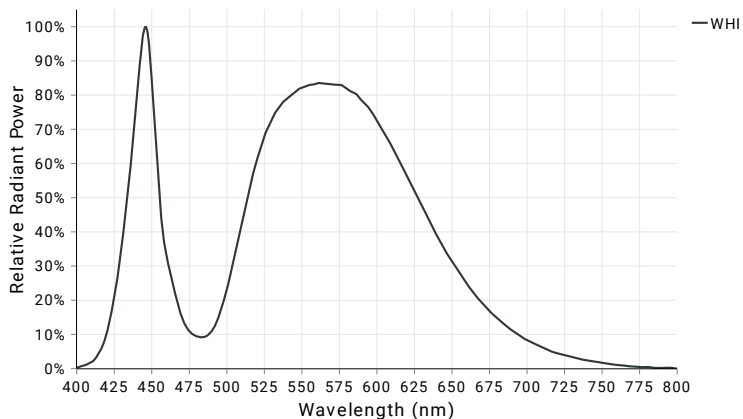


White LED illumination is the most commonly used machine vision lighting configuration. It is often the default choice when specific features of interest do not require color-based highlighting. However, [white LEDs can vary in color temperature, which can impact machine vision systems](#), specifically when matching white light sources.

The DF198 Series white LEDs have a relatively neutral color correlated temperature (CCT) of **5500 K**.

For a more detailed look at the white spectral data, download the [csv file of the raw spectral values](#) and refer to our [Product Spectra Distribution Charts PDF](#).

Visible Spectral Profiles

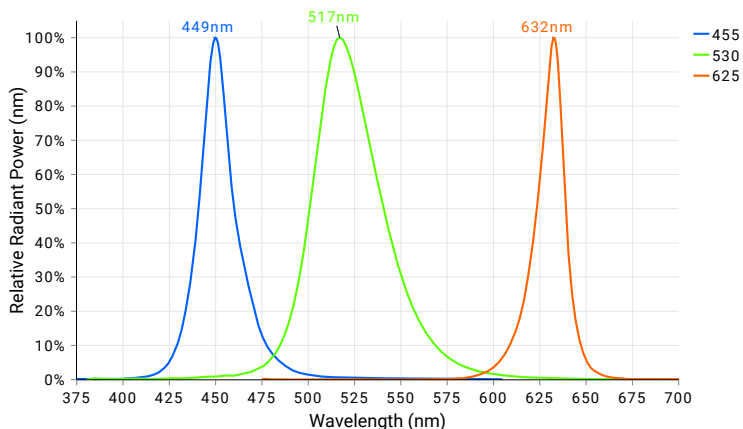

Visible color illumination consists of using wavelengths between 400-700 nm to either create or eliminate contrast on an inspection subject based on differences in a features color hue. When referring to a color wheel, simply remember the following: like colors reflect and brighten surfaces; conversely, opposing colors absorb and darken surfaces.

The DF198 Series is available in **455 nm, 530 nm, and 625 nm** configurations.

For a more detailed look at the visible color spectral data, download the [csv file of the raw spectral values](#) and refer to our [Product Spectra Distribution Charts PDF](#).

Optical Information - Continued

Photobiological Risk Factors

Group	Description	Affected Wavelengths
Exempt	No Photobiological Hazard	N/A
Group 1	No Photobiological hazard under normal behavioral limitations	455 nm, 530 nm, 625 nm, WHI, RGB
Group 2	Does not pose a hazard due to aversion response to bright light or thermal discomfort	N/A

Advanced Illumination's lighting products have been tested and classified to IEC standards by accredited testing services. For more information on our of photobiological risk factors, please view the following PDF: <https://www.advancedillumination.com/wp-content/uploads/2019/04/IEC-040119.pdf>

Cleaning Guidelines



To clean our light's optics, it is best to only clean when necessary. Dusting is always the first step in cleaning your optics. Wiping a dusty optic is like cleaning it with sandpaper. So always dust with a canned air duster or compressed and filtered air before wiping any optic. If the dusted optic has no visible stains after you dust it, then remember: "If it's not dirty, don't clean it." Avoid wiping optics when possible.

If dusting did not clean the lens or the lens has stains, use only de-ionized water and mild dish soap with a low lint cloth designed for optics to avoid damage to the optic by any harsh chemicals.


Polarizers, beam splitters and collimated films should never be wiped with any type of cloth or solvent, only use the air dusting method to clean these types of optics.

The aluminum housing can be wiped down when dusting is not a sufficient means to thoroughly clean.


Category Comparisons

Mechanical Information

Installation Drawings

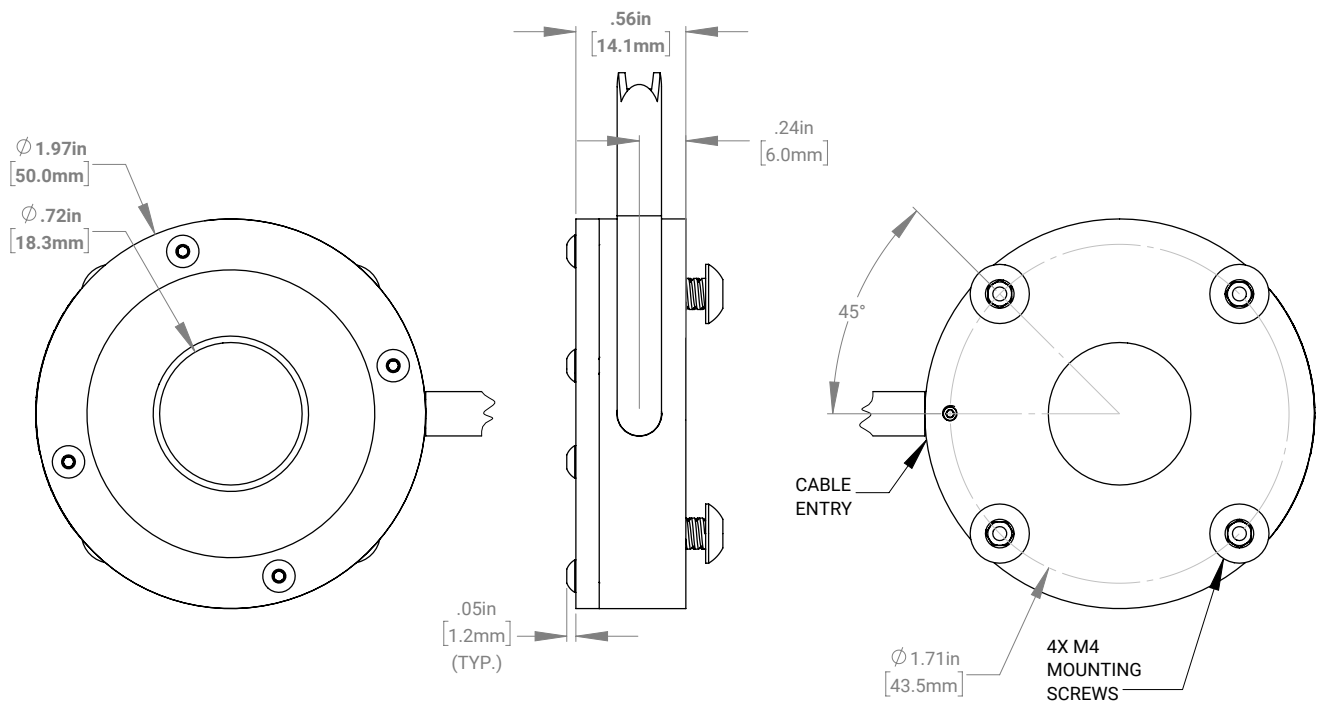


For full installation drawings and complete CAD models of this configuration, please visit the [downloads section of the product webpage](#).

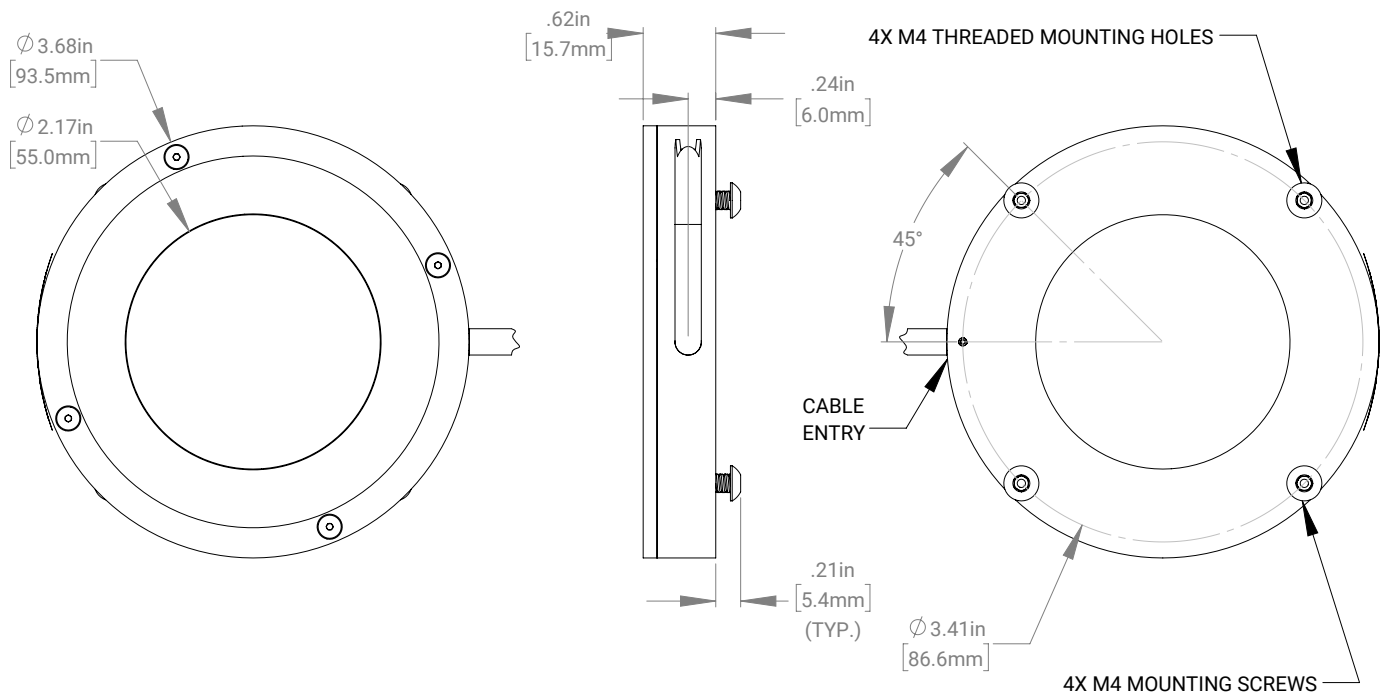


For full installation drawings and complete CAD models of this configuration, please visit the [downloads section of the product webpage](#).

Mechanical Information

Installation Drawings

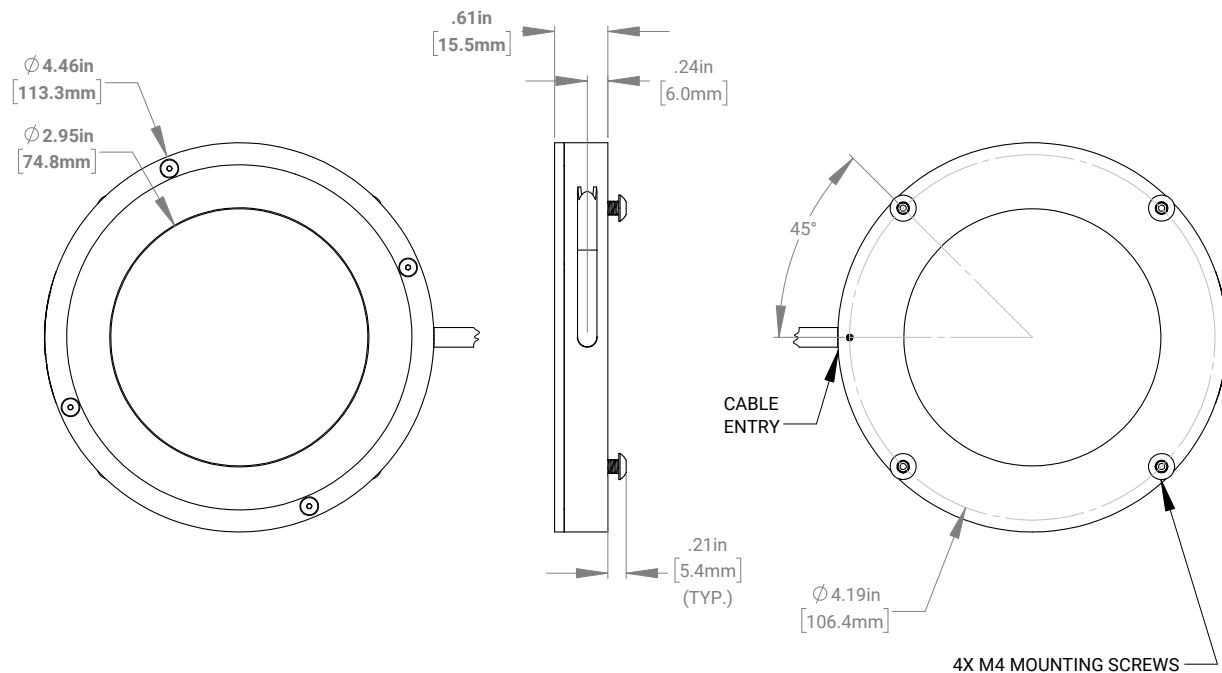


For full installation drawings and complete CAD models of this configuration, please visit the [downloads section of the product webpage](#).

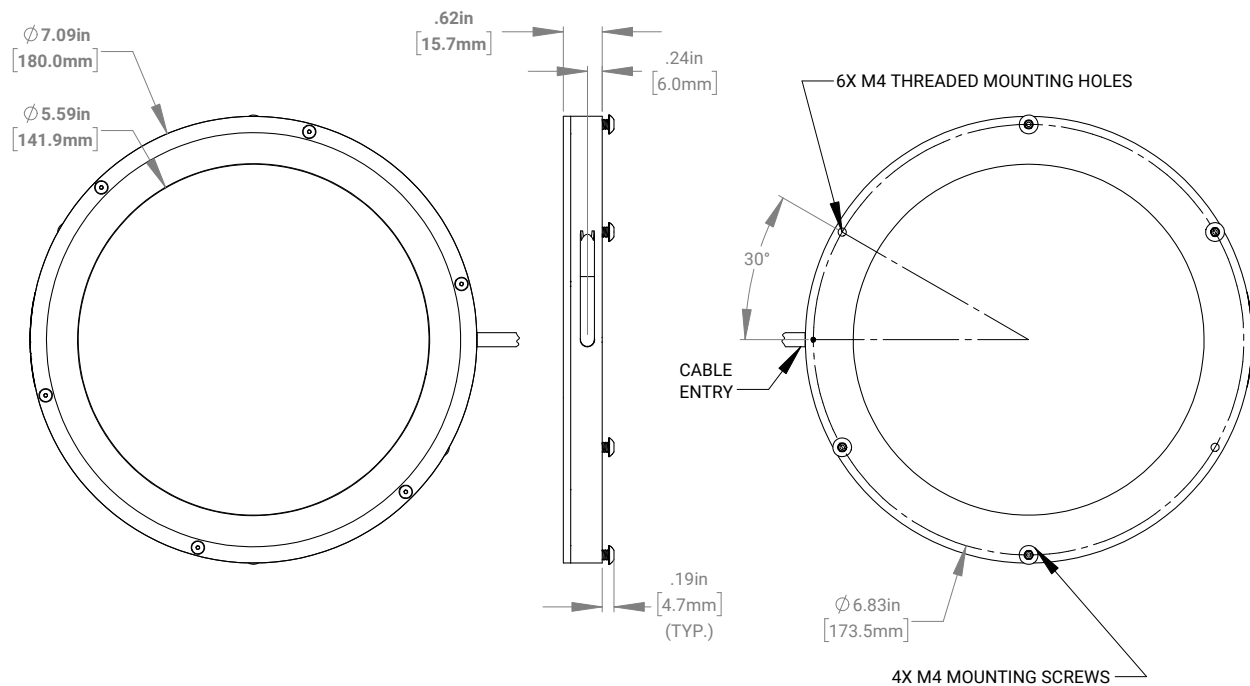

For full installation drawings and complete CAD models of this configuration, please visit the [downloads section of the product webpage](#).

Mechanical Information

Installation Drawings

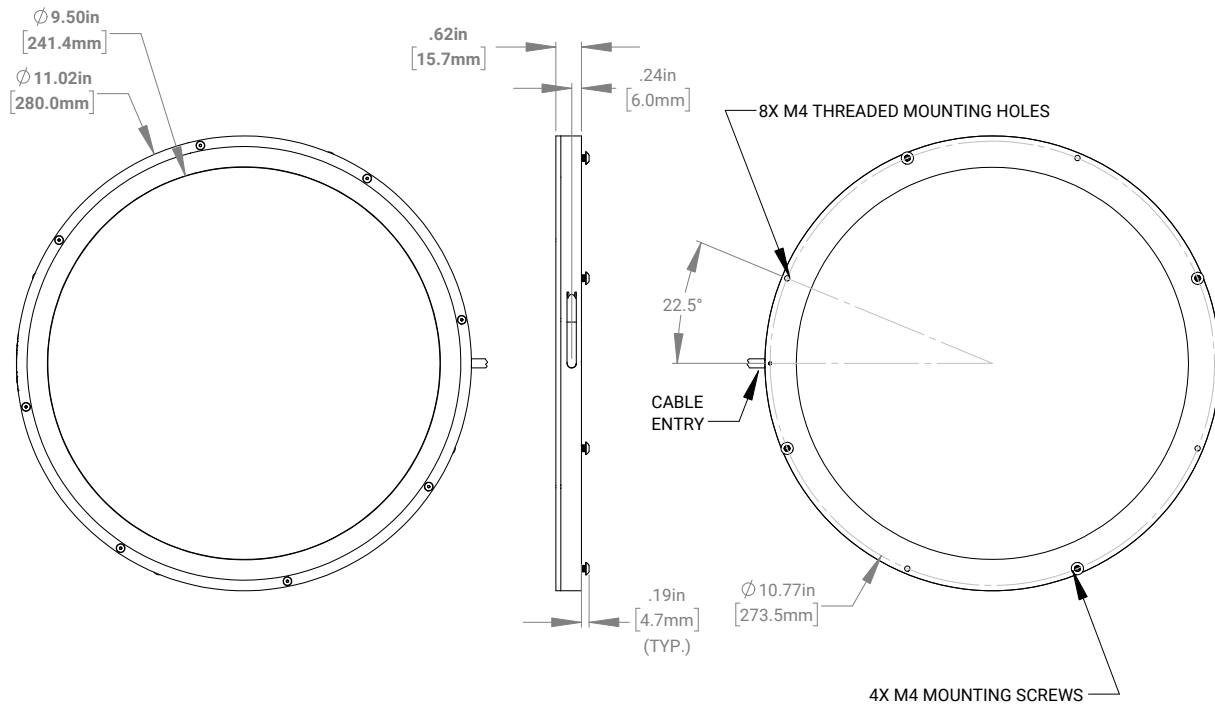

For full installation drawings and complete CAD models of this configuration, please visit the [downloads section of the product webpage](#).

Electrical Information

Power Requirements

Current Required for Power Supply Sizing, per 6" Unit Length

Wavelengths	All Controller Based Models (C1, C5, IC, I3, I3S, Q4, Q1)	Inline Controller Current Draw (IC, I3, I3S)
WHI	0.230A per sq. inch	0.350A per sq. inch
455 nm	0.230A per sq. inch	0.350A per sq. inch
530 nm	0.230A per sq. inch	0.350A per sq. inch
625 nm	0.140A per sq. inch	0.350A per sq. inch
RGB	0.650A per sq. inch	0.120A per sq. inch

Note: All Advanced Illumination lights and controllers are nominally powered by 24V DC unless otherwise noted.
Strobe overdriving with controller based models may require more current and voltage overhead.

Control Options

Controller Image	Controller Details	Connector Image
	DCS Single Output Controller - Compatible with C1 Configurations PN: DCS-100E The DCS100E is a compact, din-rail mounted general-purpose controller with (1) output, wired with (3) channels. Power Output: 100W Continuous, 525W pulsed Channels: (3), drives one lighthead with either monochrome or mixed-wavelengths (Ex. RGB) Modes: Continuous, Gated, Pulsed (with overdrive) I/Os: (3) External trigger inputs Interface: 10/100 Ethernet with SW GUI and browser-based GUI. SDK available. For more information about our DCS-100E, please visit the controller product page.	
	DCS Triple Output Controller - Compatible with C1 Configurations PN: DCS103E The DCS103E is a compact, din-rail mounted general-purpose controller with (3) outputs. Power Output: 100W Continuous, 525W pulsed Outputs: (3), drives up to three lights in sync or asynchronous Modes: Continuous, Gated, Pulsed (with overdrive) I/Os: (3) External trigger inputs Interface: 10/100 Ethernet with SW GUI and browser-based GUI. SDK available For more information about our DCS-103E, please visit the controller product page.	

Electrical Information - Continued


Control Options - Continued

Controller Image	Controller Details	Connector Image
	Pulsar 320E High Current Controller - Compatible with C5 Configuration <i>PN: Pulsar 320E</i> The Pulsar-320E is a high-power pulse-mode controller geared for driving lights at very short flash durations and high current. Power Output: 10,000W pulsed Outputs: (2), drives two lights in sync or asynchronous Modes: Pulsed I/Os: (2) External trigger inputs Interface: 10/100 Ethernet with SW GUI and browser-based GUI. SDK available For more information about our Pulsar 320E, please visit the controller product page .	
	Inline Controller - Continuous Only - IC Configurations <i>PN: N/A</i> The ICS-2 is an inline, cable-mounted general-purpose driver. The ICS-2 is configured and wired directly for the ordered lighthead and is not intended to be used as a standalone driver. Power Output: 25W Continuous Outputs: (1) Fixed with lighthead Modes: Continuous, gated I/Os: (1) External trigger input, (1) 0-10V analog dimming input Interface: Direct cable (flying leads or optional connector) For more information about our IC Controller please visit the controller product page .	
	Inline Controller - Strobe and Continuous - I3 & I3S Configurations <i>PN: N/A</i> The ICS-3 is an inline, cable-mounted general-purpose driver. The ICS-3 is configured and wired directly for the ordered lighthead and is not intended to be used as a standalone driver. Power Output: 25W Continuous, 100W pulsed Outputs: (1) Fixed with lighthead Modes: Continuous, gated, pulsed with overdrive (Adaptive Overdrive) I/Os: (1) External trigger input, (1) 0-10V analog dimming input Interface: Direct cable (flying leads or optional connector) For more information about our I3/I3S Controller, please visit the controller product page .	

Electrical Information - Continued


Inline Control Option Wiring Information

Standard Flying Lead and Optional M12 Connector Pinout Functions

Pin (M12)	Wire Color	24V Functions	IC Functions	I3/I3S Functions	M12 Pinout
1	BROWN	24V DC	24V DC	24V DC	 5-Position Male Connector
2	WHITE	N/A	0-10V Analog Control	Reserved	
3	BLUE	DC GND	DC GND	DC GND	
4	BLACK	N/A	Gate Low	PNP/Active High Trigger	
5	GRAY	N/A	N/A	0-10V Analog Control	

The functions above are only applicable when ordering an 24, IC, I3, or I3s power configuration with our without an M12 connector. For more wiring information pertaining to strobing and dimming functionality, please [visit this webpage](#).

Optional M8 Connector Pinout Functions

Pin (M12)	Wire Color	24V Functions	IC Functions	I3/I3S Functions	M8 Pinout
1	BROWN	24V DC	24V DC	24V DC	 4-Position Male Connector
2	WHITE	N/A	0-10V Analog Control	Reserved	
3	BLUE	DC GND	DC GND	DC GND	
4	BLACK	N/A	Gate Low	Active High Trigger	

The functions above are only applicable when ordering an 24, IC, I3, or I3s power configuration with our without an M12 connector. For more wiring information pertaining to strobing and dimming functionality, please [visit this webpage](#).

Accessories

Category	Accessory Image	Accessory Detail
Dimmer		Manual Dimming Accessory for the IC, I3 and I3s <i>PN: DCS-MP</i> The DCS-MP is a 30-position potentiometer, detented for precision level control and provides repeatable dimming with cable inline controllers. Features include DIN-rail mountable, a flip up cover to prevent accidental adjustments, spring clamp wiring terminal for flying leads or an M12 connector for use with the IC or I3/I3S Inline Controllers. For more information about our Manual Dimming Accessory please visit this webpage.
		Manual Dimming Accessory for the IC <i>PN: MP-ICS</i> The MP-ICS is a dimmer which is designed for use on lights with the IC Inline Controller. This unit provides for 0 – 100% intensity control. It is NOT COMPATIBLE with LLI37, BLI38, LLI67, and BLI68 "IC" Lights or lights built with the "24v controller" option. For more information about our Manual Dimming Accessory, please visit this webpage.

Accessories - Continued

Category	Accessory Image	Accessory Detail
Extension Cable		DCS-100E/103E Extension Cable, Single Light Power Cable - C1 Configuration PN: LC-XX-S This extension cable was designed for applications requiring power cables longer than the standard 2 meters provided with Ai lights. This single light cable features a single male and single female 7 pin locking connector (C1) and can be purchased in 3 - 15-meter lengths. For more information about our DCS-100E/103E Extension Cable, Single Output, please visit this webpage.
		DCS-100E/103E Extension Cable, Dual Light Power Cable - C1 Configuration PN: LC-XX-Y This extension cable was designed for applications requiring two identical lights to be powered through a single controller. These Y cables feature a single male and dual female 7 pin locking connectors (C1) and can be purchased in 3 - 15-meter lengths. See attached spec sheet for compatible light configuration. For more information about our DCS-100E/103E Extension Cable, Split Output, please visit this webpage.
Extension Cable		Pulsar 320E Extension Cable - C5 Configuration PN: LC-XX-S-C5 This extension cable was designed for applications requiring power cables longer than the standard 2 meters provided with Ai lights. This single light cable features a single male and single female Pulsar 320 connector (C5) and can be purchased in 3 - 15 meter lengths. For more information about our Pulsar 320E Extension Cable, please visit this webpage.
Adaptor Cable		Cognex Gen2 Inline Controller Adaptor Cable PN: AD-I3-CGX2 This cable adaptor is for connecting I3/I3S configured lights with Cognex Gen2 Cameras, and comes with a male to female M12 connectors. For more information about our Cognex Gen2 Inline Controller Adaptor Cable, please visit this webpage.
Filters		Camera Lens Band Pass Filters PN: BPXXX-YYY Eliminating all but a narrow band of light (+/- 40nm) centered on the specified wavelength, band pass filters are used to enhance colors, or to stop unwanted ambient light from reaching the camera. Filtering can replace existing shrouds, simplifying the physical set up of an inspection site. Ai offers 635nm and 660nm band pass filters to fit several different lens sizes. For more information about our Camera Lens Band Pass Filters, please visit this webpage.

Additional Information

Warranty

Every Advanced illumination, Inc. (Ai) product is thoroughly inspected and tested before leaving the factory. Products are warranted to be free of defects in workmanship and materials for a period of FIVE YEARS from the original date of purchase. Should a defect develop during this period, customers may return the complete product, freight prepaid, to one of Ai's distributors or to the Ai factory. All product warranty returns require a Return Merchandise Authorization (RMA) number which is obtained from Customer Service. The RMA number must be clearly marked on the outside of the package. Ai will inspect the unit, and if a defect is found will, at our option, repair or replace the product without charge. Ai disclaims liability for any implied warranties, including implied warranties of "merchantability" and "fitness for a specific purpose." For products under warranty that have since been discontinued, Ai will make an effort to replace with equivalent parts; for circumstances that do not allow for equivalent replacement, Ai reserves the right to repair or replace these products with an updated version. Ai cannot be held responsible for the unauthorized or inappropriate use of its products. Any unauthorized repair or modifications will result in a voided warranty. No Liability for Consequential Damages: In no event shall Ai be liable for any consequential, special, incidental, or indirect damages of any kind arising from the sale or use of the products.

Compliance

Our lighting products are designed and tested to meet CE, RoHS, and IEC standards. As a global ISO 9001 certified company, we understand the importance of compliance and perform accelerated testing on every product before shipment. For more information on our compliance standards, please see our compliance documentation here: <https://www.advancedillumination.com/services/compliance-statements/>

Electromagnetic Compatibility

This product was tested and complies with the regulatory requirements and limits for electromagnetic compatibility (EMC) as stated in the product specifications. These requirements and limits are designed to provide reasonable protection against harmful interference only when the product is operated in its intended industrial electromagnetic environment. To minimize the potential for electromagnetic interference or unacceptable performance degradation, install and use this product in strict accordance with the instructions in the product documentation.

Customer Service

For information on existing orders, or to make an order adjustment, contact us Monday through Friday 8:00 am to 5:00 pm ET or send an email to orders@advancedillumination.com.

Company Information

Advanced Illumination
440 State Garage Road, Rochester, VT 05767
Phone: +1 (802) 767 3830
Fax: +1 (802) 767 2636
Email: info@advancedillumination.com
Web: advancedillumination.com
© 2023 Advanced illumination Inc. All rights reserved